

## TTagsSender Communication Driver

This document has the specific information related to this driver configuration. For a generic explanation on Device Module, Channels, Nodes and Points configuration, please refer to the reference guide.

### Contents

Section 1 – Summary Information .....	2
Section2 – Nodes Configuration .....	2
Station Configuration.....	2
Section 3 – Points Configuration.....	2
Address .....	2
Section 4 – Troubleshoot .....	2
Revision History .....	3

## Section 1 – Summary Information

**Communication Driver Name:** TTagsSender

**Current Version:** 1.0.0.0

**Implementation DLL:** T.ProtocolDriver. TTagsSender.dll

**Protocol:** Proprietary

**Interface:** UDP

**PC Hardware requirements:** Ethernet board

## Section2 – Nodes Configuration

### Station Configuration

**Stations syntax:** < Host > ; < Port >

Where :

< Host > = IP Address

< Port > = UDP port

## Section 3 – Points Configuration

### Address

String field

## Section 4 – Troubleshoot

The status of the driver execution can be observed through the diagnostic tools, which are:

- Trace window
- Property Watch
- Module Information

## Revision History

Revision	Version	Description	Date
A	1.0.0.0	Initial Revision	<i>July 2016</i>