WITS Level 0 Pason Communication Driver

This document has the specific information related to the driver configuration. For a generic explanation on Devices, Channels, Nodes and Points configuration, please refer to reference guide.

Contents

Section 1 – Summary Information	2
Section 2 – Channel Configuration	2
Settings	2
Section 3 – Node Configuration	2
Section 4 – Point Configuration – Address field	2
Section 5 – Troubleshoot	3
Revision History	3

Section 1 - Summary Information

Communication Driver Name: WITS0Pason

Implementation DLL: T.ProtocolDriver. WITS0Pason.dll

Protocol: WITS Level 0 Pason **Interface**: TCP/IP, UDP or RS232

Description: WITS0Pason communication driver implements communication with server running

WITS Level 0 communication.

PLC types supported: WITS servers outputting Level 0 data streams

Multi-threading: user defined

Max number of nodes: user defined

PC Hardware requirements: Standard PC Ethernet interface board

Supported Operands: Any tag defined on target system

Section 2 - Channel Configuration

Settings

Nothing to do

Section 3 - Node Configuration

The address is necessary, as this driver works in listening mode only. When connecting to multiple devices, multiple channels shall be defined.

Section 4 - Point Configuration - Address field

The syntax for the communication point is:

RecordID:ItemID

Where, RecordID and ItemID ranges from 01 to 99, according WITS Level 0 record definition.

Section 5 - Troubleshoot

The status of the driver execution can be observed through the diagnostic tools, which are:

- Trace window
- Property Watch
- Module Information

The above tools indicate if the operations have succeeded or have failed where the status 0 (zero) means success. Negative values are internal error codes and positive values are protocol error codes.

Revision History

Revision	Description	Date
Α	Initial Revision	October, 2014